
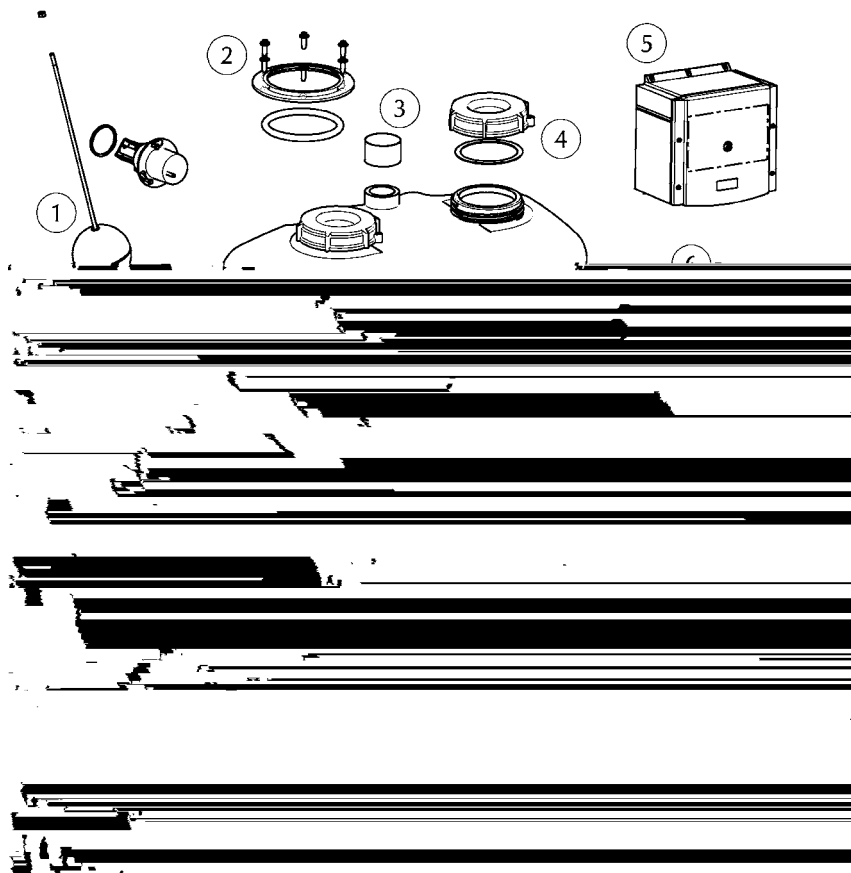



| ħġāŋōăĥĊĐ . ñÖÅÃŮ ħġ í Ůî î î Đ W - ÚĀĤĒ Ĩ ĩ È ĩ ĢĐ ! ģĦĈĀíăñĭċĐ f Ůîăĭ ÈìăĂŮŮ í ĂĐ Запасные части -

[illegible]

[illegible]

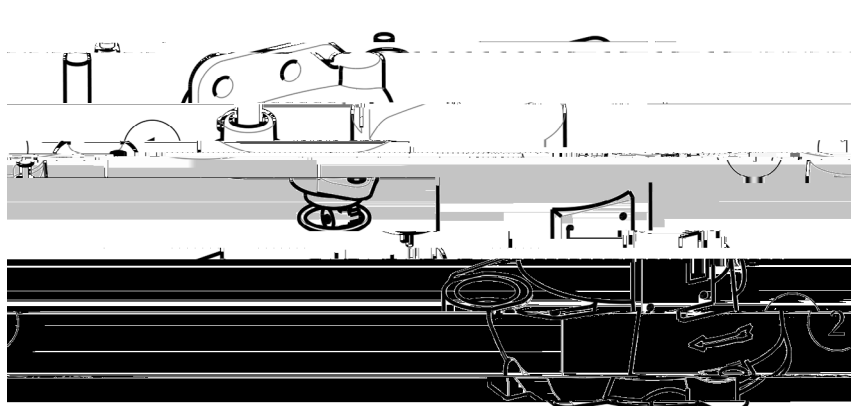


①	Leitung	Cable	JP43717
②	Stator + Gehäuse	Stator + Housing	JP47042
③	Rotorwelle	Rotor shaft	JP45791
④	Motorabdichtung	Motor seals	JP46806
⑤	Laufadschraube	Impeller screw	JP46802
⑥	Lagersatz	Bearing set	JP46724
⑦	Lagerschild	Bearing housing	JP43720
⑧	Dichtungssatz	Seal set	JP46807
⑨	Laufad	Impeller	
	10/4		JP45793
	15/4		JP45794
	25/4		JP45795
⑩	Schraubensatz	Screw set	JP47291

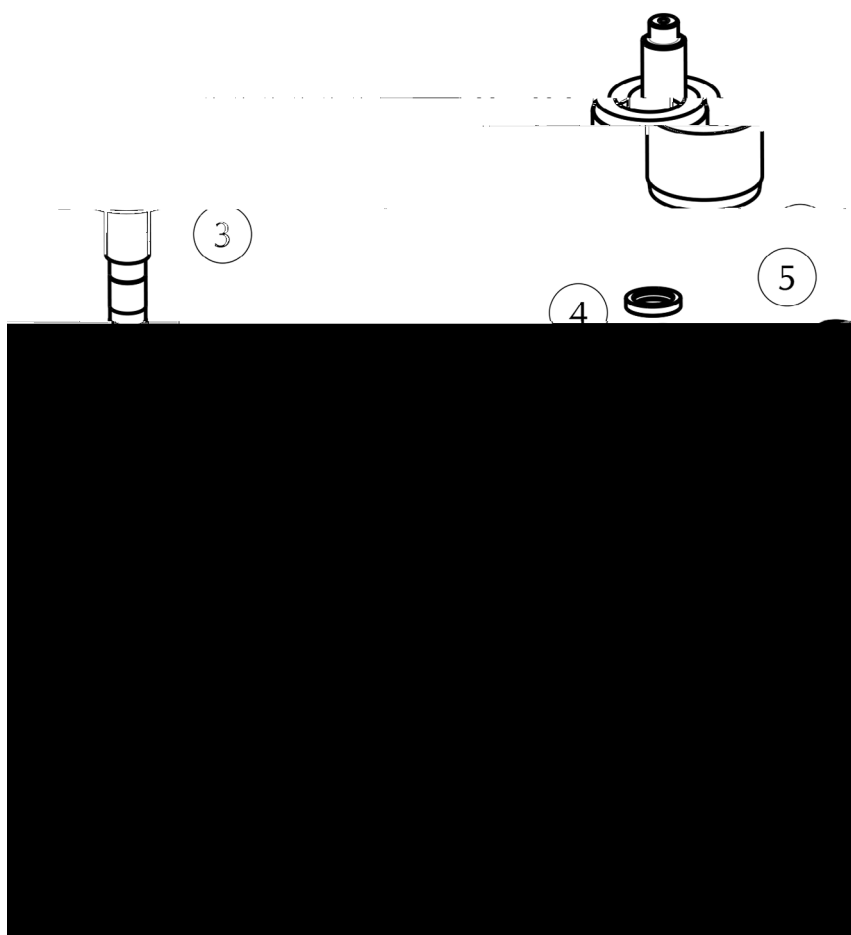

JUNG PU

UC 25/2 • 35/2

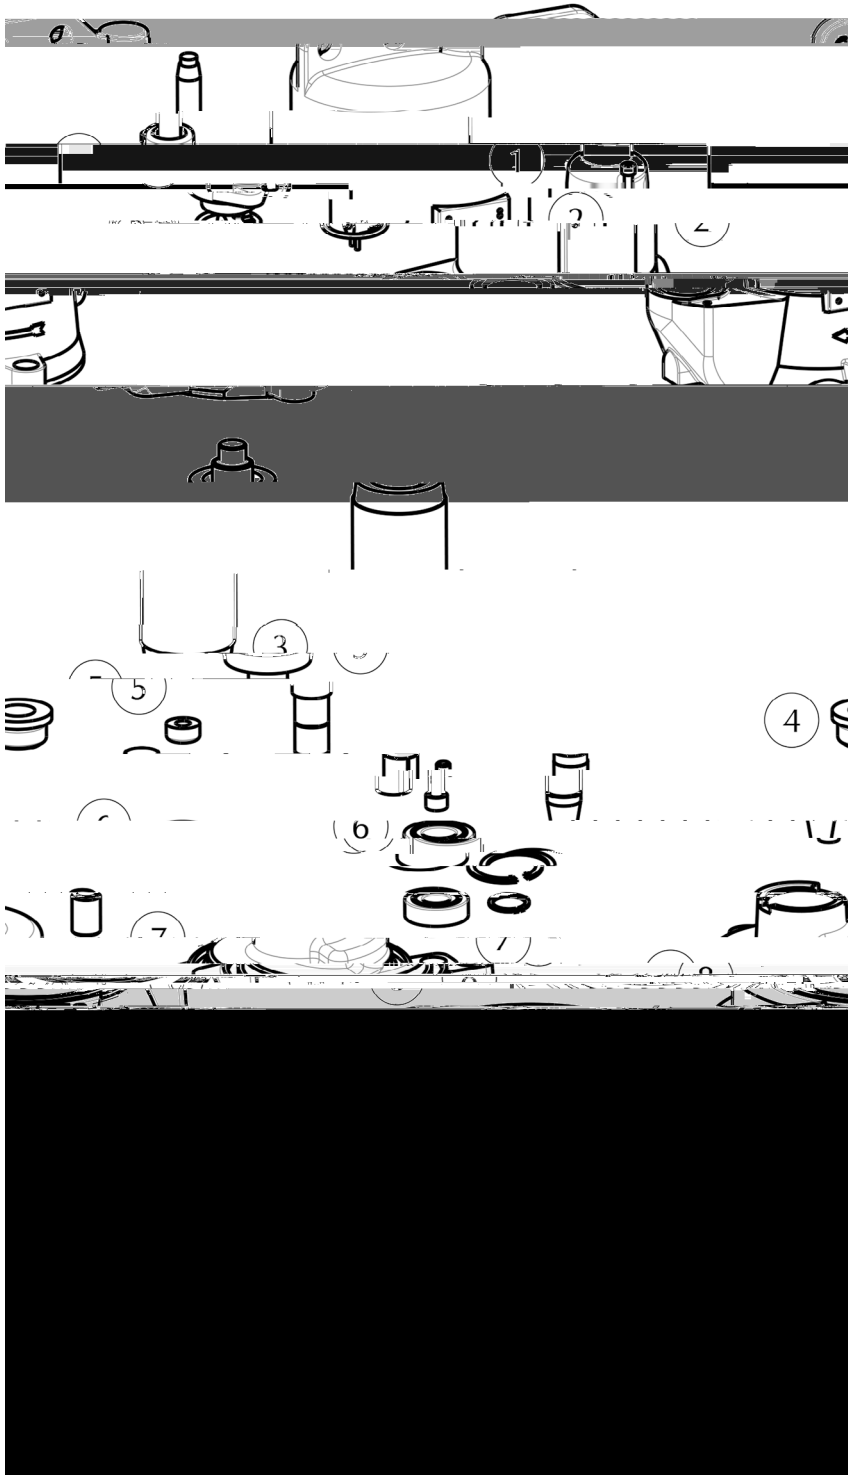

①	Leitung	Cable	JP43717
②	Stator + Gehäuse	Stator + Housing	
	25/2		JP44008
	35/2		JP46211
③	Rotorwelle	Rotor shaft	
	25/2		JP47038
	35/2		JP47039
④	Gleitringdichtung	Mechanical seal	JP46567
⑤	Lafradschraube	Impeller screw	JP46805
⑥	Lagersatz	Bearing set	JP46214
		Bearing housing	JP43726
		Seal set	JP46807
		Impeller	JP46715